

KEY PLAN:

Building Orientation:

Elevation Indicator:

View-ID:

Sheet No. To Be Referred:

Lab Stools and Chairs Shown are for Knee Space Indication Purpose Only

Lab Stool:

Lab Chair:

Casework Details:

Handle:

Drawer:

Hinge:

Double / Single Swing Door:

Toe Space:

Elevation View:

Casework Legend:

Plan View:

E40C292218-04

- HANDLE STYLE
- DOOR DIRECTION (RIGHT/LEFT OPEN)
- CABINET LENGTH
- CABINET DEPTH
- CABINET HEIGHT
- METAL CABINET
- CABINET SERIES

Notes:

First Floor Central Wing



Ground Floor Central Wing

KEY PLAN:

Building Orientation:

Elevation Indicator:

Sheet No. To Be Referred:


Lab Stools and Chairs Shown are for Knee Space Indication Purpose Only:

Casework Details:

Casework Legend:

Elevation View:

Notes:

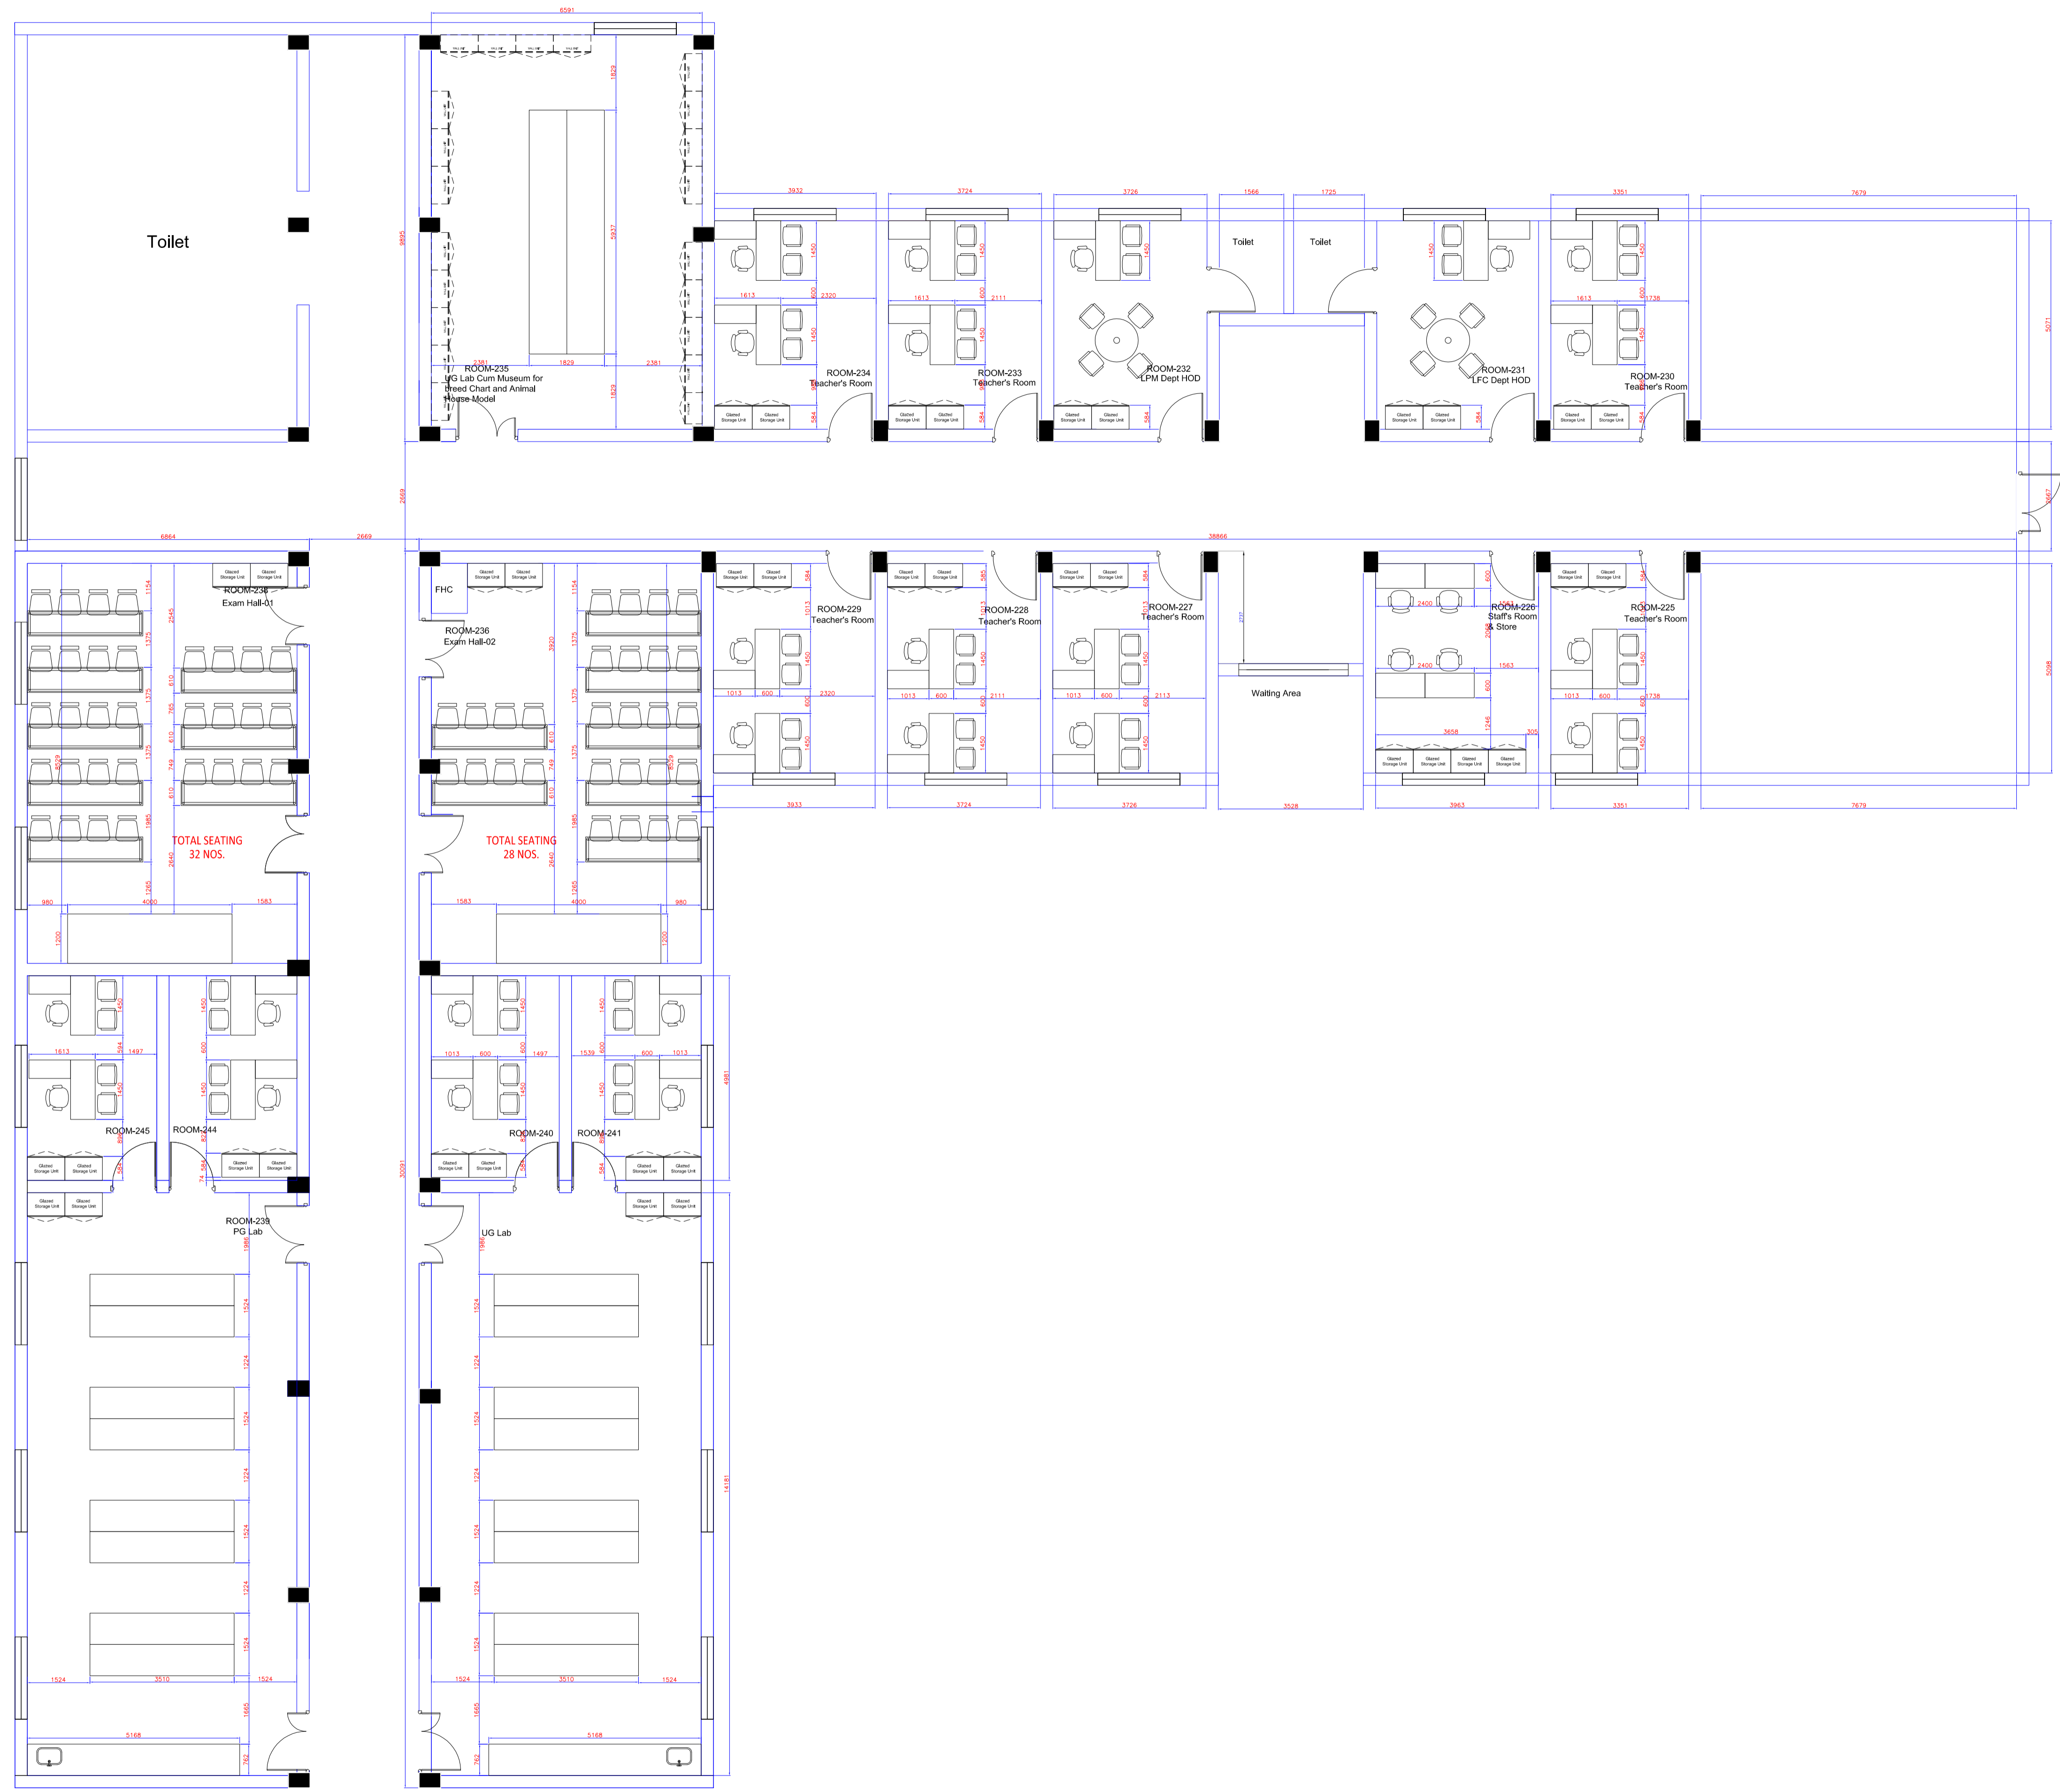

KEY PLAN:

Building Orientation:

Elevation Indicator
View-ID

Sheet No. To Be Referred

Lab Stools and Chairs Shown are for Knee Space Indication Purpose Only

Lab Stool Lab Chair

Casework Details:

Handle
Drawer
Hinge
Double / Single Swing Door
Toe Space

Casework Legend:

Plan View


E40C292218-04

HANDLE STYLE
DOOR DIRECTION (RIGHT/LEFT OPEN)
CABINET LENGTH
CABINET DEPTH
CABINET HEIGHT
METAL CABINET
CABINET SERIES

Elevation View

Notes:

Second Floor Central Wing

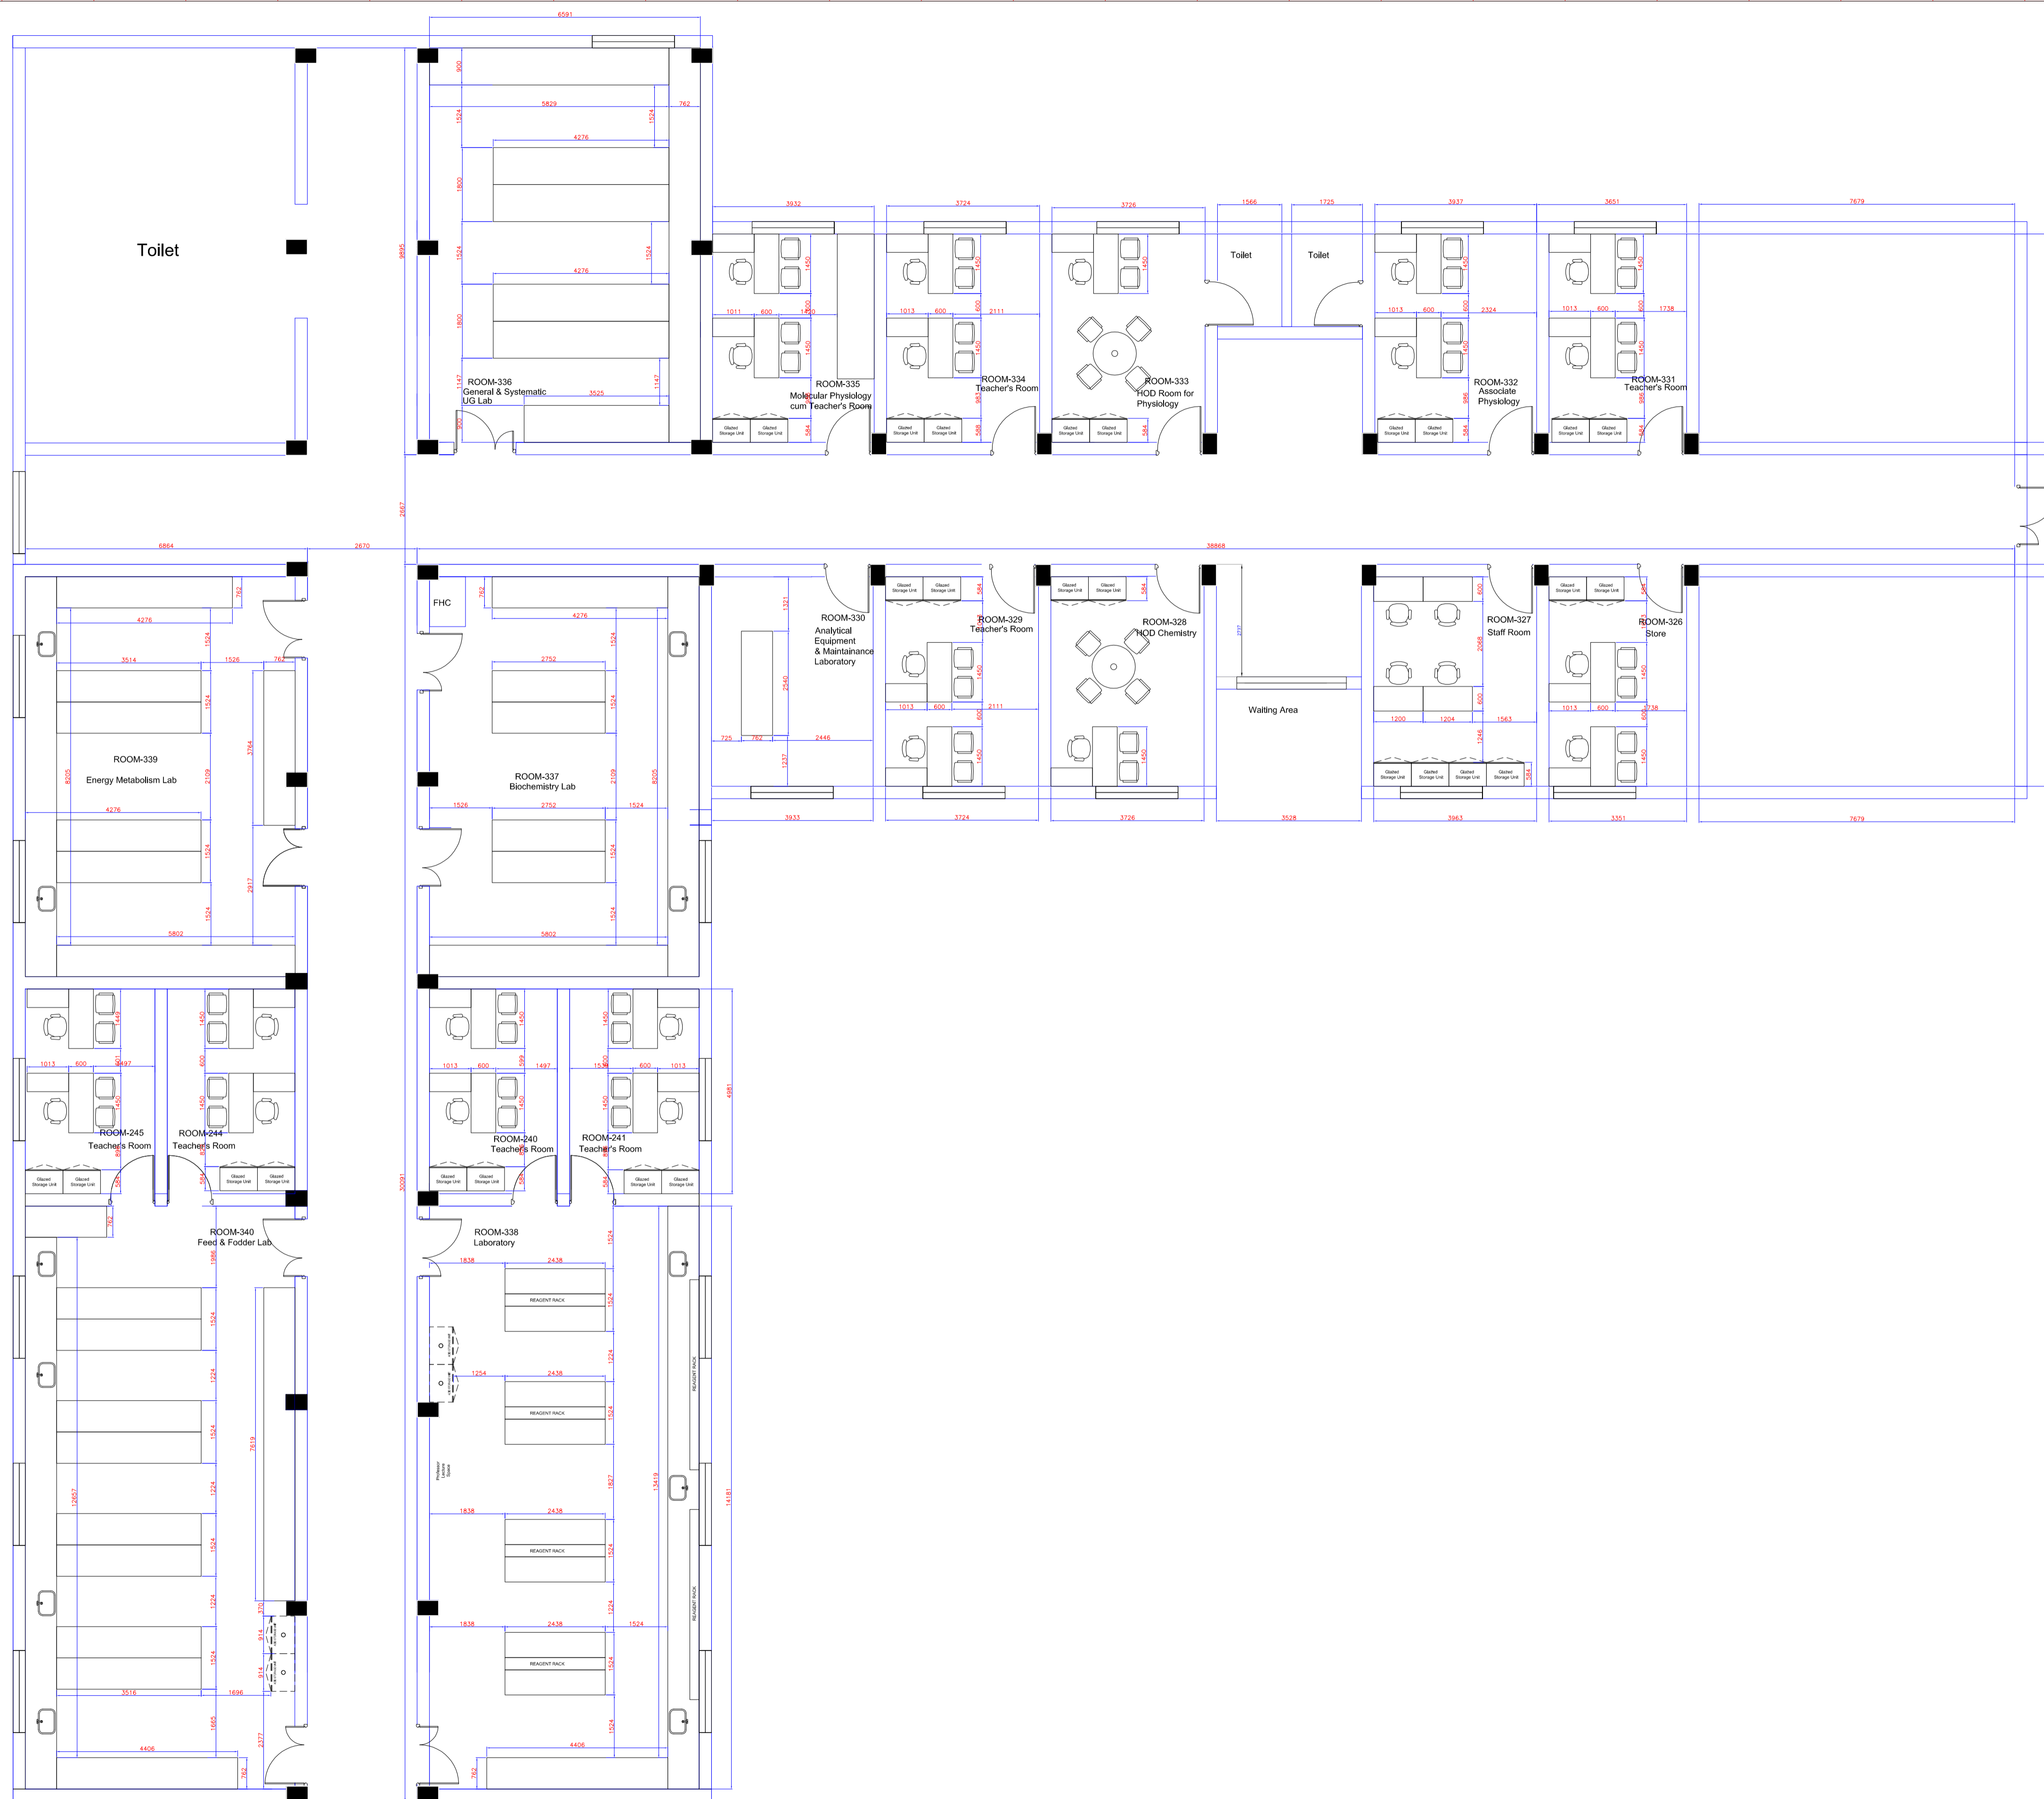

KEY PLAN:

Building Orientation:

Elevation Indicator:

View-ID:

Sheet No. To Be Referred:

Lab Stools and Chairs Shown are for Knee Space Indication Purpose Only

Lab Stool:


Lab Chair:

Casework Details:

Casework Legend:

Notes:

Third Floor Central Wing

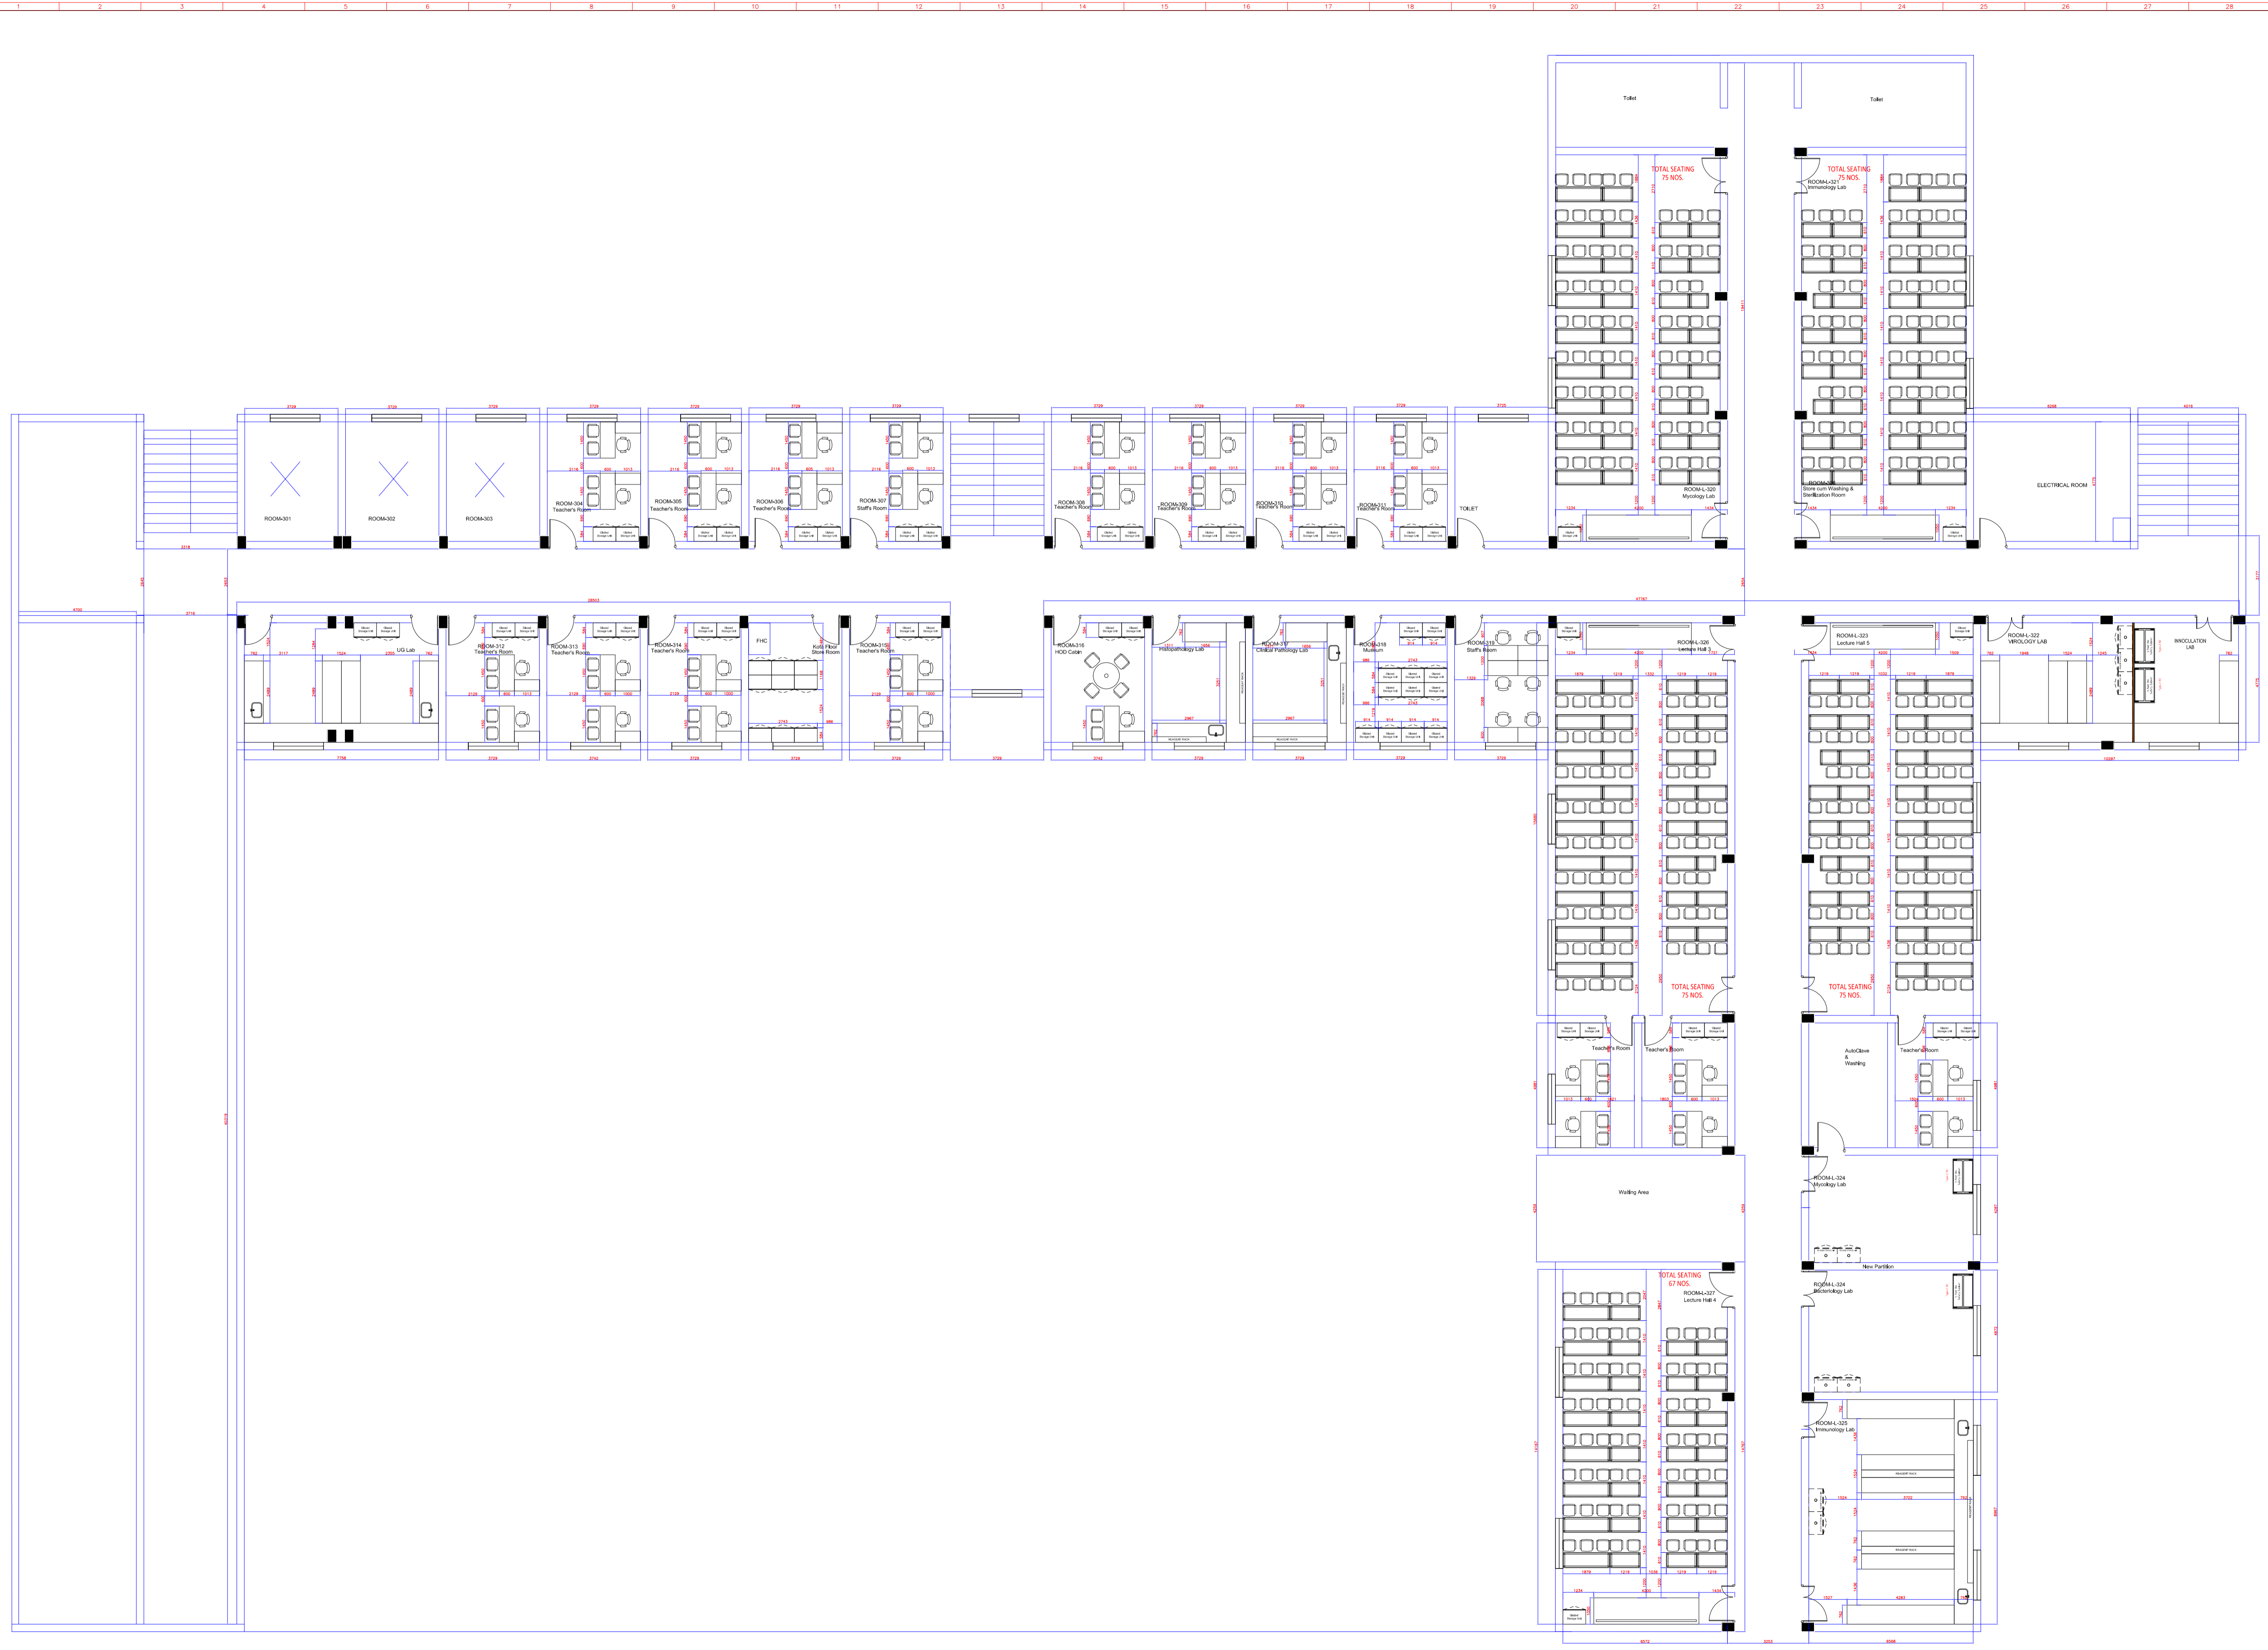

KEY PLAN:

Building Orientation:

Elevation Indicator
View-ID
Sheet No. To Be Referred

Lab Stools and Chairs Shown are for Knee Space Indication Purpose Only

Lab Stool Lab Chair

Casework Details:

Handle
Drawer
Hinge
Double / Single Swing Door
Toe Space

Casework Legend:

Plan View

E40C292218-04

HANDLE STYLE
DOOR DIRECTION (RIGHT/LEFT OPEN)
CABINET LENGTH
CABINET HEIGHT
METAL CABINET
CABINET SERIES

Notes:

Third Floor Helipad Side